


# SONY VPL-PX5 OPERATING INSTRUCTIONS

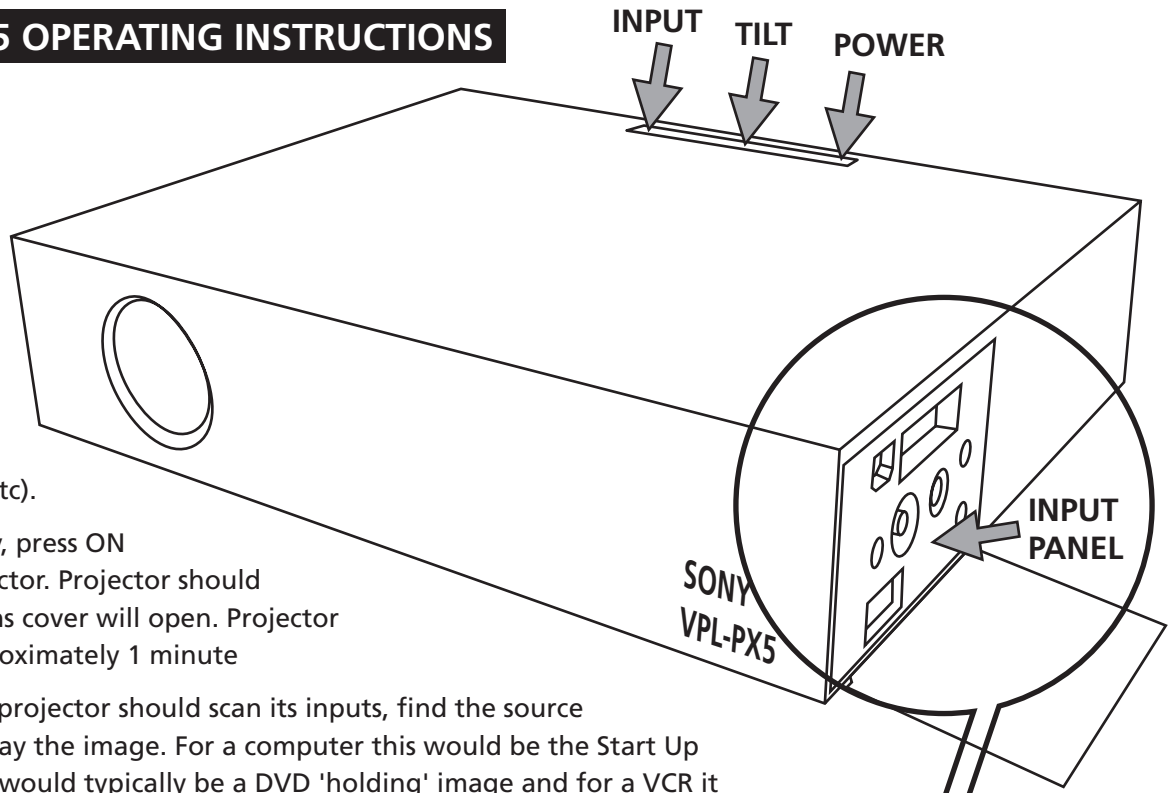

## OPERATION


Boot up Computer or turn on Playback Device (VHS, DVD, etc).

After device is ready, press ON button on the projector. Projector should raise slightly and lens cover will open. Projector warm up takes approximately 1 minute

As it warms up, the projector should scan its inputs, find the source connected and display the image. For a computer this would be the Start Up screen, for a DVD it would typically be a DVD 'holding' image and for a VCR it would typically be a blue screen.

If there is no image check to be sure that the Playback device is sending a signal. Make sure the device is powered on, and for a PC press FUNCTION F8. Check the connections making sure the cable is connected to the VIDEO OUT of the device. Press INPUT on the projector. It will rescan for a signal to display. Also press INPUT to switch between devices if more than one is connected.

**COMPUTER INPUT**  
Connect From MONITOR OUT of Computer using VGA Cable Supplied.

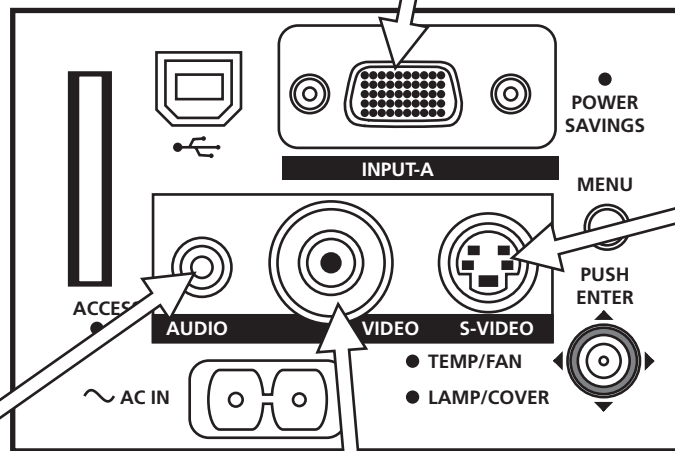

**STEREO MINI PLUG INPUT**  
Connect From AUDIO OUT Of Playback Device (Computer, DVD, VCR) Using A Stereo Mini Plug On Projector and Appropriate Connectors On Playback Device. Audio Volume Is Insufficient To Support Large Rooms

**RCA VIDEO INPUT**  
Connect From VIDEO OUT of DVD, VCR or other playback device using RCA cable.

**S-VIDEO INPUT**  
Connect From SVIDEO OUT of DVD or SVideo Equipped VCR. Provides Better Picture Quality Than RCA Connection.

## CONNECTIONS